

PLEASE FOLLOW ALL INSTRUCTIONS IN THE ORDER THEY ARE PRESENTED STARTING WITH THE "INTRODUCTION".

INTRODUCTION

Congratulations! The Clicker Model K2 you have purchased is one of the most unique keypad transmitters available. The K2 works in conjunction with *most* 390Mhz Chamberlain, Sears, Lift-Master, Wayne Dalton, Master Mechanic and Genie (9 or 12 position) door operator systems. In order to identify your brand look for the company name on your existing transmitter or garage door operator.

The K2 transmitter can be programmed to operate one or two garage doors. It is possible to program the system to replace the 9 position and 12 position Genieand/or a Chamberlain type opener through the use of separate PIN numbers.

All the information that the keypad system needs for proper operation is programmed through the keyboard. The K2 system will not operate until it is properly programmed. It is therefore important that each instruction be followed in the order presented.

NOTE: DO NOT MOUNT THE K2 UNIT UNTIL YOU HAVE COMPLETED ALL OF THE PROGRAMMING STEPS AND CHECKED FOR PROPER

STEP 1: CHECKING THE OPERATION OF THE KEYPAD

NOTE: During the programming it is necessary to wait 30 seconds between each step. This is a normal part of the setup of the K2 keypad transmitter.

Press any *number* on the keyboard. The keyboard should light up and remain illuminated for approximately 6 seconds. If it does not light up refer to the BATTERY REPLACEMENT section and check to make sure that the battery is properly connected. *Wait 30 seconds before proceeding to the next step.*

STEP 2: PROGRAMMING YOUR PIN NUMBER FOR DOOR ONE

- A. Pick any 3 *numbers you* can remember. (Use any combination or any order of three numbers you desire.)
- B. Follow each step carefully:
 - (1) Press the numbers 1, 2 & 3
 - (2) Press the "*" key
 - (3) Press the three numbers you want as your PIN number
 - (4) Press the "*" key again
 - (5) Wait 30 seconds before proceeding to the next step

EXAMPLE: Press 1,2,3, press *, press XXX (your PIN number) press *.

STEP 3: PROGRAMMING TRANSMITTER TYPE & DIP SWITCH SETTINGS

- A. Open your present remote transmitter or receiver so that you can see the number of code switches (dip switches). (Recent models of Chamberlain, Sears, etc. may not have code switches in the transmitter and/or may not have any code switches in the receiver.)
- B. From the list below, determine which transmitter type your present system uses. (The name of your present system can be found on the operator, the remote transmitter or receiver). Place a check next to your transmitter type.
1. Chamberlain, Sears, Wayne Dalton, Master Mechanic
 2. Genie with 9 code switches. (Not the Kryptar system).
 3. Genie with 12 code switches
- C. If you have a Chamberlain proceed straight to the Chamberlain Data Entry Table below. If you have a 9 or 12 code Genie proceed straight to the Genie Data Entry Table below.

Chamberlain DATA ENTRY

Look at your system transmitter or receiver, and making sure that you place a **number in each of the eight boxes**:

Place a "1" in each box where the code switch is set into the "+" position.

Place a "2" in each box where the code switch is set into the "0" position. Place a 3 in each box where the code switch is set to the minus "-" position.

| | | | | | | | | | |
|---|--|--|--|--|--|--|--|--|--|
| + | | | | | | | | | |
| 0 | | | | | | | | | |
| - | | | | | | | | | |

GENIE DATA ENTRY

Look at your system transmitter or receiver, and making sure that you place a **number in each of the nine or twelve boxes**:

Place a 1 in each box where the code switch is set into the "ON" position. Place a "2" in each box where the code switch is set into the "OFF" position.

Enter 9 code switches or ----12

| | | | | | | | | | | | | | | |
|---|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| O | | | | | | | | | | | | | | |
| N | | | | | | | | | | | | | | |
| O | | | | | | | | | | | | | | |
| F | | | | | | | | | | | | | | |

- D. Recheck to make sure that each number in the above box corresponds to the setting of your system receiver or remote transmitter making sure there is a number in each box.
- E. You are about to enter your security code (above) into the K2 memory. It is important that you follow each sequence as presented and you push each button carefully.

Using the Data Entry Table you completed enter the following:

For the CHAMBERLAIN

- (1) Enter your PIN number
- (2) Press the "#" key
- (3) Press the "1" key
- (4) Press the "#" key
- (5) Enter the 9 numbers from your Data Entry Sheet (1,2, or 3) in order, check off each number as it is entered
- (6) Press the "#" Key

For the GENIE 9 or 12 code

- (1) Enter your PIN number
- (2) Press the "#" key
- (3) Press the "2" key (for the 9 code) or "3" key (for the 12 code)
- (4) Press the "W" key
- (5) Enter the 9 or 12 numbers from your Data Entry Sheet (1 or 2) in order, check off each number as it is entered
- (6) Press the "#" key

NOTE: If the data is not entered properly the K2 system will automatically reset. When this happens the keyboard light will extinguish. Wait 30 seconds and repeat STEP E. Your System has now been programmed.

NOTE: The K2 keypad remains active for approximately 30 seconds after the last keyboard button is pushed. This feature is included so that it is possible to activate the keypad to stop and or reverse a moving door without having to reenter your PIN number. Press any key EXCEPT the "*" or "#" to use this feature.

Step 4: TESTING YOUR SYSTEM

Take the unit to the approximate location that it will be mounted. STAND CLEAR OF THE GARAGE DOOR, and:

- Enter your PIN number.
- Enter one additional number** (it can be any number). If the system has been programmed correctly the door should open, if not see "Troubleshooting"

NOTE: When using your keypad always enter one additional number after your PIN number, to open the door.

ADDITIONAL INSTRUCTIONS (For Chamberlain only)

If your present system does not have any code switches you may **choose any dip** switch security code you desire. Fill in the nine boxes on the **Chamberlain Data Entry** Sheet with any combination of the numbers 1, 2, and 3 and enter this information into the K2 memory by starting with step E. If your present system has a "Smart" receiver (red or green push button on the back of the operator) it will be necessary to now program the K2 into your system.

Enter your PIN number Press and continue to press any number key Press the programming "Smart" button on the back of the operator When coded the adjacent light will change state (go steady or flash) Release both buttons. Wait 30 seconds and proceed to Step F.

If your present system has three push buttons on the transmitter the switch setting may NOT be the for the button being used to open the garage door. (There are three codes set with the use of one switch setting). If this is the case, reprogram the unit (Step C) using one of the two remaining choices (numbers) for switch one (box one). Reprogram the unit with this new setting and re-follow each step again. If the system still does not work call Clicker Customer Service for additional instructions.


Step 5: PROGRAMMING A SECOND DOOR (OPTIONAL)

If you have the same brand of garage door opener on your second door and want to use the K2 Keypad to open the door follow each of the previous steps EXCEPT STEP TWO. To program the **second** PIN number into the K2 system use the numbers 4, 5, and 6 instead of 1, 2, 3 and then enter a new PIN (Different from door one) into the unit. All other instructions are the same.

Step 6: INSTALLATION/ MOUNTING

- Locate the mounting screws supplied.
- Remove the Battery Cover and the slide up cover. Carefully remove the battery from its compartment. (it is not necessary to disconnect the battery)
- Mount the K2 Keypad (using the screws supplied) to a flat vertical surface near your garage door.

CAUTION. Make sure there is enough room above the keypad to slide the cover up. Check to make sure that you mount the unit out of the path of a moving door.

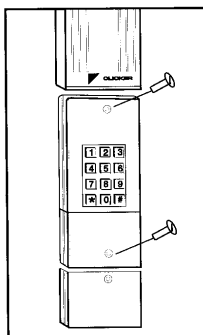

BATTERY REPLACEMENT

- Slide up the K2 Keypad cover into the stop position.
- Unscrew the battery cover.
- Remove the old battery and replace with new one.
- Replace the battery cover.

GENERAL INFORMATION

- Replace the battery when the keypad lamps become dim.
- Memory is NOT lost when the battery is removed.
- You may change PIN numbers as often as you like.
- Any incorrect PIN number entry will lockout the unit for 30 seconds.

TROUBLESHOOTING

| | | |
|--------------------------|-----------------------------------|-----------------|
| Keypad does not light up | - | Replace battery |
| Door does not open | Wrong PIN number | Check battery |
| | Door code does not match operator | |

CAUTION

Use of this wireless keypad should be limited to responsible adults. Automatic Gate and Garage Door systems are dangerous. They can cause great bodily harm and injury and can result in death. Always exercise caution when using wireless keypads. Do not operate keypad to activate a gate or door unless you can clearly see that the area is clear. Always keep children away from automatic doors and gates.

WARRANTY

This Clicker Corporation product is warranted to the end user to be free of defects in material or workmanship for a period of 12 months from date of purchase. Proof of this purchase date, such as a dated sales receipt must accompany any and all warranty claims. Defective product should be returned to the address specified below. Return product will be replaced or repaired free of charge and returned to you transportation prepaid. This warranty is valid only in the United States, District of Columbia and the Commonwealth of Puerto Rico.

There are no obligation or liabilities on the part of The Clicker Corporation for consequential damages arising out or in connection with the use or performance of this product or other indirect damages with respect to loss of property, revenue, profit, cost of removal, installation or reinstallations. Implied warranties, including those of merchantability and fitness for a particular purpose are limited to one year from the date of purchase. The Limited warranty give you specific right. You have others, which vary from State to State.

For Warranty Service return to: The Clicker Corp. 540 S. Andreasen Dr. Suite C Escondido, CA 92029